## HIT-FLON®

100 ml

# Engine coating 30,000 km • 10 l oil volume Fuel saving up to 200 l

Lower fuel consumption	<b>¥</b> 25 %
Lower oil consumption	▼ 80 %
Better emission values	<b>∀</b> 30%
Better performance	<b>▲ 15</b> %
Quieter running	<b>∀</b> 10%
Reduced engine temperature	<b>∀</b> 10%
Less wear	<b>▼</b> 54%
Emergency lubrication	<b>▼ 100 %</b>
<b>▲∀</b> = up to (theory)	

HUTH INDUSTRIE TECHNIK

Made in Germany • www.hit-flon.com

#### **Operating Instructions**

To be strictly followed.

- Suitable for all gas-powered and diesel engines with a minimum 25,000 km – no new vehicles.
- Shake the bottle thoroughly before opening it –
   PTFE particles are heavier than oil.
- Engine must be warm to the touch; therefore, run it for a short period of time before filling.
- Pour the entire bottle into the oil container;
   100 ml is good for 10 litres of oil. Always remove lower part of the cap with the cap from the bottle.
- Subsequently, run the engine for at least 25 km.
- Important: coating takes place during the next 1,000 km.
- After adding HIT-FLON® to the oil, change oil only after 1,000 km.
- Coating remains up to 30,000 km, also after an oil change.

## HIT-FLON®

200 ml

White cap

66,000 km • 25-40 l oil volume Diesel saving up to 1,000 l

**Black cap** 

66,000 km • 10–25 l oil volume Diesel saving up to 750 l

Lower fuel consumption	<b>▼ 25</b> %
Lower oil consumption	<b>∀</b> 80 %
Better emission values	<b>∀</b> 30 %
Better performance	<b>▲ 15</b> %
Quieter running	<b>∀ 10</b> %
Reduced engine temperature	<b>∀</b> 10 %
Less wear	<b>▼</b> 54 %
Emergency lubrication	<b>▼</b> 100 %

 $\blacktriangle \forall$  = up to (theory)

### **Engine coating**

#### **Operating Instructions**

To be strictly followed.

- Suitable for all diesel engines with a minimum 100,000 km – no new vehicles.
- Shake the bottle thoroughly before opening it –
   PTFE particles are heavier than oil.
- Engine must be warm to the touch; therefore, run it for a short period of time before filling.
- Pour the entire bottle into the oil container. Always remove lower part of the cap with the cap from the bottle.
- Subsequently, run the engine for at least 60 km.
- Important: coating takes place during the next 2,000 km.
- After adding HIT-FLON® to the oil, change oil only after 2,000 km.
- Coating remains up to 66,000 km, also after an oil change.